

# Departing Traffic

## A380 parking positions

Frankfurt-Hahn **does not serve A380 aircraft in the real world**, but as an airport that regularly sees large cargo aircraft it has some cargo stands that are large enough to park the aircraft. To maintain realism and prevent inconveniences for controllers and other pilots, we ask pilots to choose a different airport when flying the A380.

Please only use the following stands when flying an A380 from/to Frankfurt-Hahn airport:

- **411, 421, 431** (primary)
- 326, 331, 333, 451 (overflow positions)

## Start-Up and Enroute (IFR) Clearance

In Germany you have to request “start-up” to get your IFR clearance. This does not include the pushback, therefore a separate approval is required!


- **Always check the current ATIS first!**
- Report Callsign, ATIS Information and request start-up and enroute clearance
- **Only request start-up when you are ready for pushback within the next 5 minutes**
- Clearance also available via Datalink (PDC/DCL via [Hoppie ACARS System](#)) - check Controller Info for Airport Code!
- Valid routes out of Frankfurt/Hahn are available via [grd.aero-nav.com](#). For more details check additional information at the end.
- There are a number of different SID available for different performances, please report on initial contact if you are unable to comply with a climb restriction. Make sure you will always fly the assigned SID!

*NOTE: The Controller may change your planned departure route due to operational reasons.*

“ RYR123, Information A, request start-up and enroute clearance.

## Pushback

Only ask for Pushback if you are able to **start pushback immediately when receiving pushback approval!** It might be possible that ATC will instruct you to do a specific routing for pushback (into a specific taxiway, push and then pull forward, etc.). **Always report when unable or if you do not understand the instruction!**

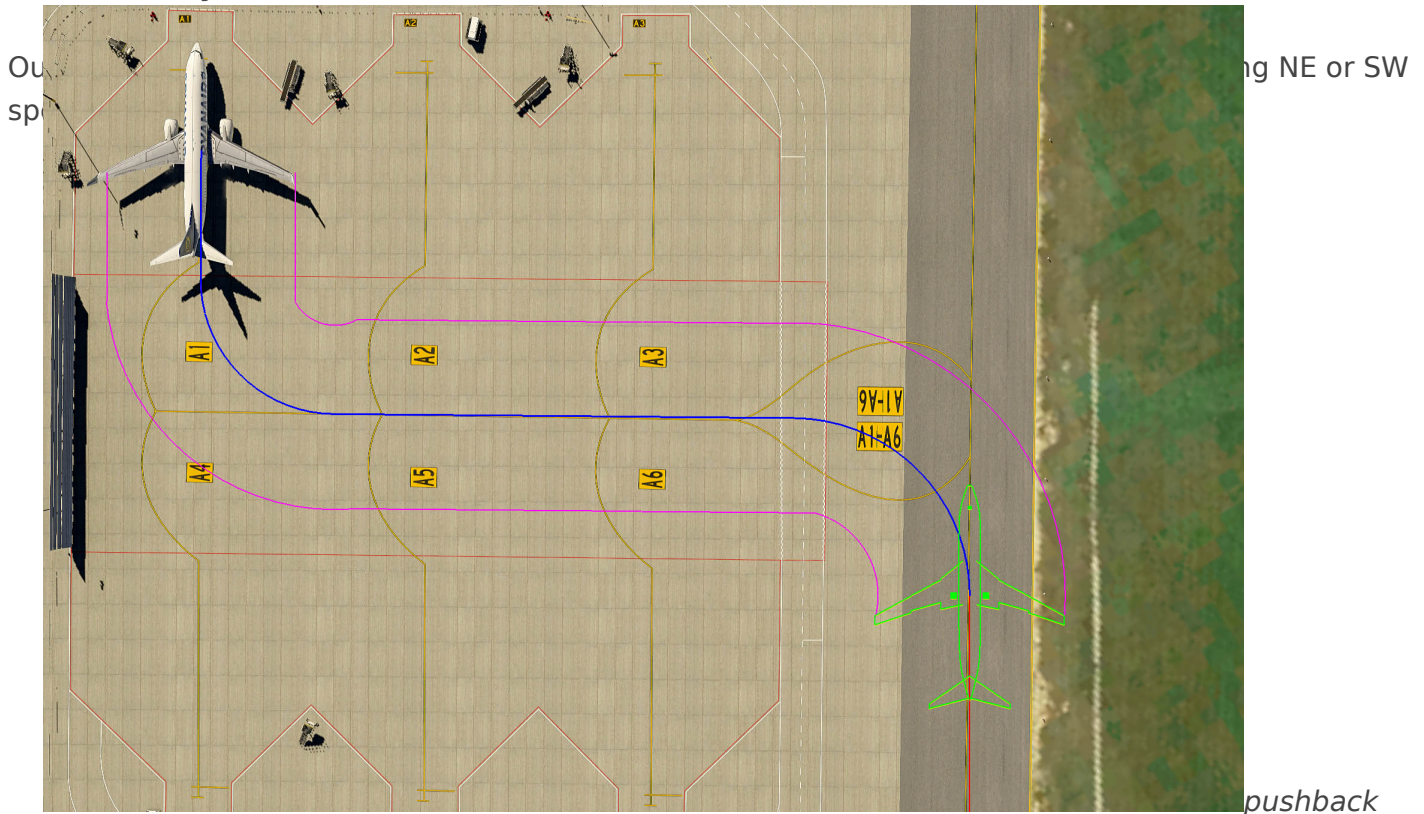

*from A1 on taxiway A*

## Intersection Departure

Runway 21 intersection take-off via taxiway E should be used whenever in performance parameters. Departing medium aircraft (max. B739/A321) should always **expect intersection E**. Report if unable before pushback!

## Departure Frequency

Departing IFR traffic have to **contact Langen Radar** without separate instruction, **immediately when airborne**. You will always find the correct departure frequency in the ATIS!

---

Revision #2

Created 25 October 2022 19:13:31 by 1288197

Updated 31 October 2024 12:40:18 by 1627359