

Overview

Before staffing this airport for the first time:

Obtain a successful grade at the self-enrollment Moodle course: **EDDW - Bremen Tower**.

Bremen ATC Stations

Station	Station ID	Login	Frequency	Remark
ATIS	ADW	EDDW_ATIS	132.380	--
Ground	DWG	EDDW_GND	121.755	--
Tower	DWT	EDDW_TWR	120.330	--
Sector Friesland	FRI	EDDW_APP	124.800	--

Bremen Ground shall be staffed only when Bremen Tower is online.

General Information

Maximum Runway Capacity

Departures/hour	Arrivals/hour	Global/hour
18	18	30

Quicksheet

Standard

09

27

CLB

4000ft

BASUM

1M

1Z

ERLAD

3Z

5Z

NIE

8M

1Z

GESTO

1M

1L

WSN

1M

1L

SOFED*

1M

1L

OTEXE

1M

1L

If Unable

09

27

CLB

4000ft

BASUM

1M

1Z

ERLAD

3Z

5Z

NIE

8M

1Z

GESTO

1M

1L

WSN

1M

1L

SOFED*

1M

1L

OTEXE

1M

1L

Climb via SID

*Only to be used if ED-R 202/302 is not active.

(Re-routing via OTEXE N125 SOFED during activity)

EDDW Quicksheet

Revision: 27-10-2024

ID	Freq	Callsign
ADW	132.380	Bremen ATIS
DWG	121.755	Bremen Ground
DWT	120.330	Bremen Tower
FRI	124.800	Bremen Radar
EIDE	124.075	Bremen Radar
ALR	126.325	Bremen Radar
EIDW	120.225	Bremen Radar
WC	133.725	Bremen Radar

Approach Procedures		
	09	27
APP	ILS	ILS
ID	IBRE	IBRW
FREQ	110.30	110.90
CRS	086°	266°
FAF	IBUTI	ROGBO
ALT	2000 ft	2000 ft

Revision #14

Created 2 February 2024 09:40:26 by 1463320

Updated 30 October 2024 10:39:14 by 1395737